

# VIC-20

## The Friendly Computer

No accessories required!  
Plugs directly into your VIC 20!

## CARTRIDGE

### SUPERSMASH

The World Championship is at stake! As a finalist do you have the cat-like reflexes to return the speeding ball and take the crown? On your toes ...this is raquetball at its toughest!



ONLY WITH GAME





 **commodore**  
COMPUTER

## INSTRUCTIONS FOR USE



**SUPERSMASH****Loading the Cartridge and Starting the Game.**

1. Turn your VIC-20 OFF before inserting or removing the cartridge.
2. Insert the cartridge (label side up) into the wide expansion port on the back of the computer.
3. Turn the VIC-20 ON. After a second or two, the opening title should appear on the screen. (If the title doesn't appear, turn your VIC-20 off then back on).

**Adjusting Screen Position**

To center the picture use the  and  keys. Each time you press the  key, the picture will move to the right, and when the  key is pressed, the picture will move towards the bottom of your TV screen. Keep using these two keys until you are satisfied the picture is centered within your screen. (NOTE: Once the game has begun you can not change the screen colors).

**Eliminating Screen Flutter**

On some TV sets with automatic fine tuning your screen may "flutter" up and down when using a computer or video game. To correct this, hold down the  key and hit the  key. (NOTE: Doing this with a standard TV set may cause the screen to flutter).

**STRATEGY**

Smash through increasingly difficult levels. You control the paddle — moving from right to left . . . center your paddle beneath the smashing ball . . . sending it back towards the wall . . . smashing through the blocks.

3 different games in one. Choose your level of play by pressing . . .

- |          |                  |
|----------|------------------|
| F1 ..... | Normal Play      |
| F2 ..... | Special Play     |
| F3 ..... | Progressive Play |

Each time you smash through to the ceiling, your paddle cuts down to 1/2 of its original size . . . more skill, more action and more fun.

## CONTROLS

Only played with game paddles . . .

Fire Button ..... Starts game

Paddles..... Controls movement of game paddle

## SCORING

Red Blocks ..... 10 Pts.

Light Blue Blocks ..... 20 Pts.

Pink Blocks..... 30 Pts.

Green Blocks..... 40 Pts.

Dark Blue Blocks..... 50 Pts.

Yellow Blocks..... 60 Pts.

There are no 60 point blocks in progressive play.



Postbus 8192 1005 AD Amsterdam  
Kabelweg 88 - 1014 BC Amsterdam



© Copyright 1981 by Commodore Business Machines, Inc. All rights reserved. No part of the programs or manual included in this work may be duplicated, copied, transmitted or reproduced in any form or by any means without the prior written permission of Commodore.


**Plugs Directly  
Into Your  
VIC 20 Computer**

YOU DON'T HAVE TO BE A COMPUTER EXPERT TO USE THE COMMODORE VIC 20 — THE FRIENDLY COMPUTER. ALL YOU DO IS INSERT THIS CARTRIDGE AND TURN IT ON!

EACH CARTRIDGE GIVES YOUR VIC 20 A TOTALLY DIFFERENT PERSONALITY — GAME MACHINE, CALCULATOR, WORD PROCESSOR, CHESS MATE, CONSULTANT OR DECISION MAKER.

VIC CARTRIDGES COME IN SEVERAL DIFFERENT CATEGORIES, WITH COLOR CODED LETTERING OR LABELS TO HELP YOU FIND THE AREA YOU'RE INTERESTED IN — RECREATION & GAMES (RED), EDUCATION (BLUE), BUSINESS & CALCULATION (GREEN), HOME UTILITY (ORANGE), AND COMPUTING AIDS (BLACK).

WHETHER YOU'RE INTERESTED IN ARCADE-STYLE ACTION LIKE JUPITER LANDER, SOPHISTICATED STRATEGY GAMES LIKE SARGON CHESS, OR PRACTICAL PROGRAMS LIKE HOME FINANCE OR VICWRITER, YOUR VIC 20 IS A REAL FRIEND.

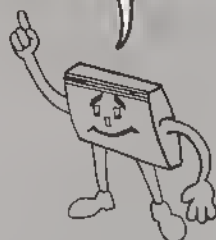

Support  
magazijn

 **commodore**  
**COMPUTER**

Printed in Hong Kong

 **commodore**

**VIC-1921**



***SUPER SMASH***